
- *Woodpeckers*® -ENGLE*A*NGLE

OWNER'S MANUAL

 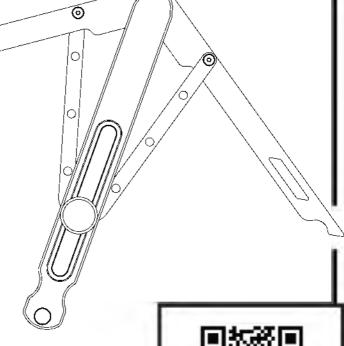


 


Scan the QR code above to watch the video or visit woodpeck.com under the video tab towards the bottom of the product page.


USING YOUR ENGLE ANGLE


- 1. Loosen the locking knob and adjust the arms of the Engle Angle to match the corner you're fitting. FIGURE A & B
- 2. Tighten the locking knob and transfer the angle between the central body and one arm to your material. **FIGURE C**
- 3. If it is necessary to set the angle on your miter saw, rather than marking your material, disconnect one arm and move it out of the way.
- 4. Align the connected arm to the back fence of your miter saw. *FIGURE D*
- 5. Unplug your miter saw. Bring the blade down to just above the table and adjust the miter angle until the saw blade matches the body of the Engle Angle. Confirm the fit with a test cut.







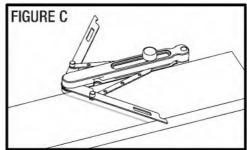

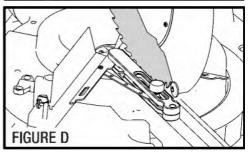

Woodpeckers

Woodpeckers, LLC Strongsville, Ohio woodpeck.com

