


Woodpeckers[®]

Freehand Guard

Drilling Template

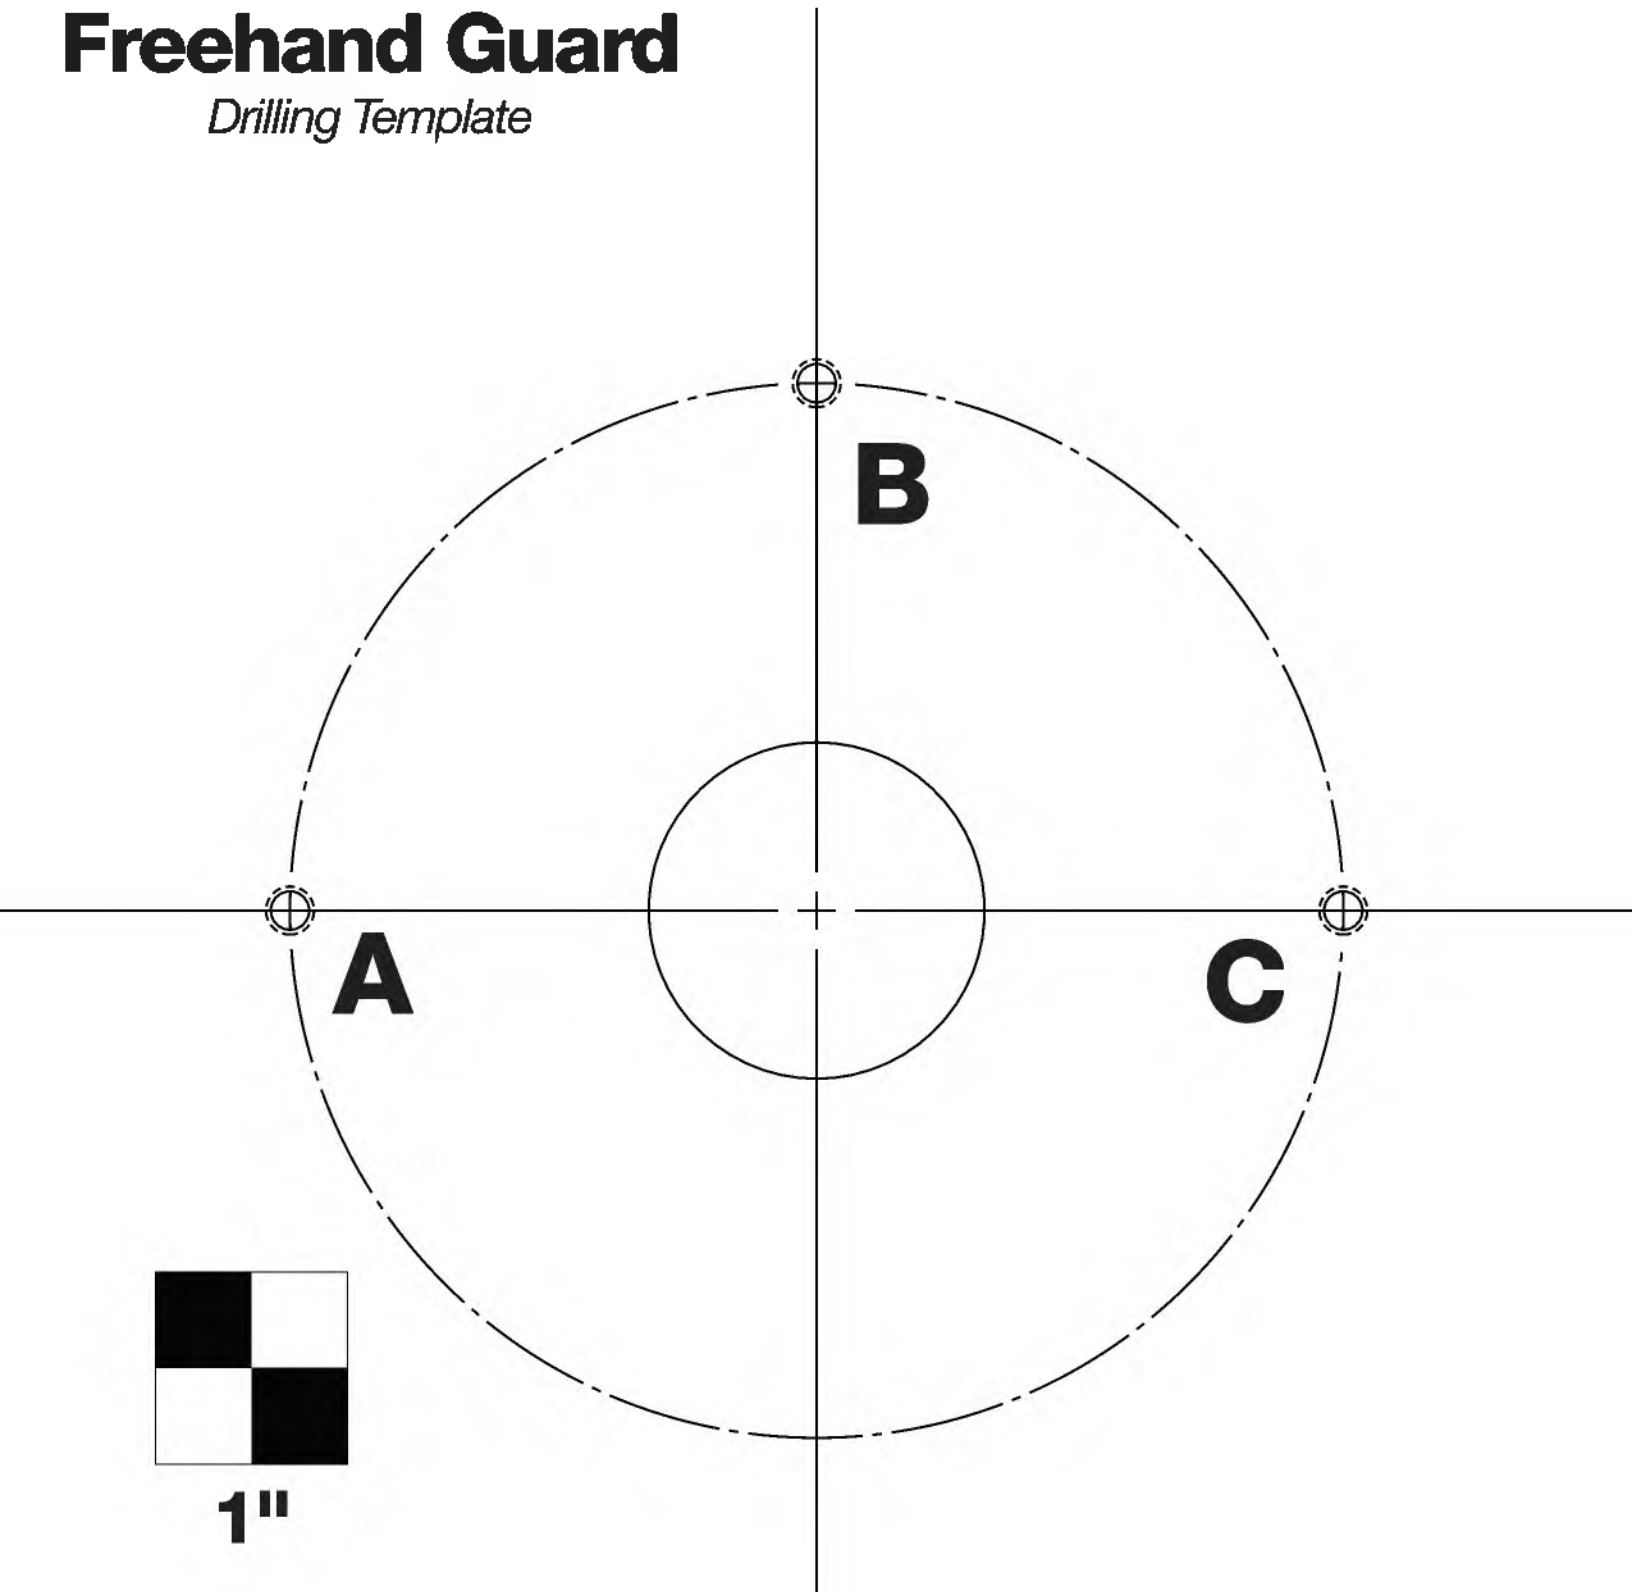

1. Print full size. Do not scale. Verify 1" scale above with an accurate rule.
2. Mark center lines on your router plate.
3. Cut out, align the centerlines, and tape the template to your router plate.
4. Mark the hole locations using a center punch. Use holes A & B, B & C, or all three.
5. Pre-drill the holes using a #7 (.201") drill bit (*not included*) through the plate.
6. Tap the hole using a 1/4-20 UNC tap (*not included*).