


# Woodpeckers®

## TRACK CONNECTOR

### I N S T R U C T I O N S

Install the 1/4"-20 Clamping Screws  
② into the flat bottom of the Track  
Connector ①. Reach through the  
clearance hole with the 1/8" Hex Key  
③ to thread.

To join tracks, center the Track  
Connector between two tracks, be sure  
the ends meet flush and secure the  
Clamping Screws with the Hex Key.

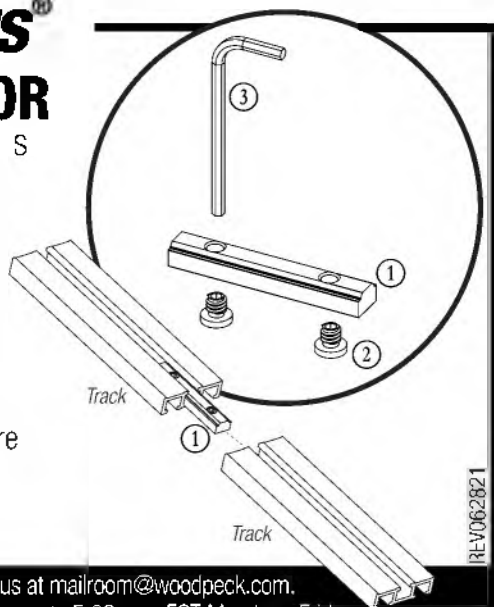

REV062821

If you think you're missing anything, email us at [mailroom@woodpeck.com](mailto:mailroom@woodpeck.com).  
You can also call us at 800-752-0725 from 9:00 a.m. to 5:00 p.m. EST Monday - Friday.



**WARNING!** This product can expose you to chemicals, including chromium, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to [www.P65Warnings.ca.gov](http://www.P65Warnings.ca.gov)

Woodpeckers, LLC Strongsville, Ohio  
**woodpeck.com**  
© 2011 Woodpeckers, LLC