


Woodpeckers[®]

EXACT WIDTH DADO JIG EDGE GUIDES

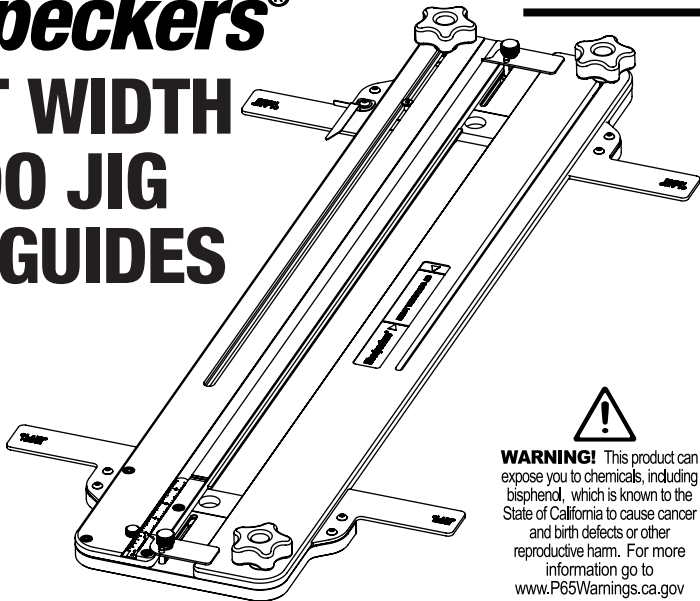


WARNING! This product can expose you to chemicals, including bisphenol, which is known to the State of California to cause cancer and birth defects or other reproductive harm. For more information go to www.P65Warnings.ca.gov

REV032421

If you think you're missing anything, email us at mailroom@woodpeck.com.
You can also call us at 800-752-0725 from 9:00 a.m. to 5:00 p.m. EST Monday - Friday.

HOW TO CUT THE EDGE GUIDES

1. Measure 24-1/2" down the length of the Edge Guide strip and mark a thin line on the Edge Guide. Do this to both sides of the Edge Guide. *FIGURE A.*
2. Lightly score on both of the marked lines with a utility knife. *Be sure to cut enough to go through double stick tape, but not fully through all of the material.*
3. Snap the shorter piece off the Edge Guide and discard. *FIGURE A-2.*

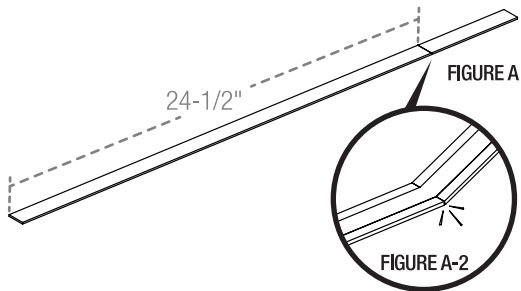

INSTALL EDGE GUIDES

1. Remove transfer tape backing from the Edge Guide. Locate each end of the Edge Guide into the recessed corners on the backside of the Black Rails on the Exact Width Dado Jig. *FIGURES B & B-2.*
2. Apply even pressure to the Edge Guide securing it in place.
3. Repeat for the other Edge Guide. Edge Marker indicates edge of stock for Dado Stop alignment.

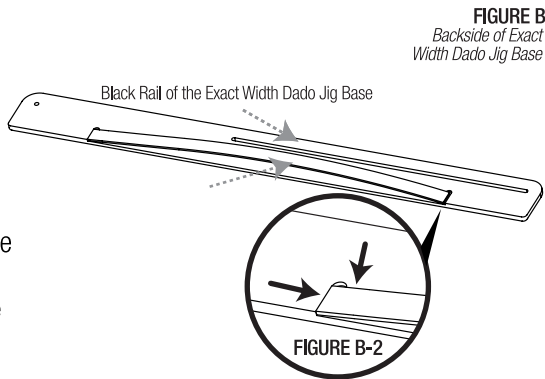


FIGURE B
*Backside of Exact
Width Dado Jig Base*